RISER FIRESEAL
MEASURING INSTRUCTIONS

1. Measure the width of the riser opening —take several measurements from top to bottom and make a note of the narrowest and widest measurements —check that the widest measurement is no more than 60mm wider than the narrowest measurement.
2. Measure the height of the riser opening .
3. Check that there is a minimum of 25mm of space between the surface of the wall and the contents of the riser (see diagram 1).
4. Check that there is 70mm wall space each side of the riser (see diagram 1).
5. If the checks are ok, submit the narrowest width dimension and the height along with your choice of panels (see other side) to our sales team for a price.

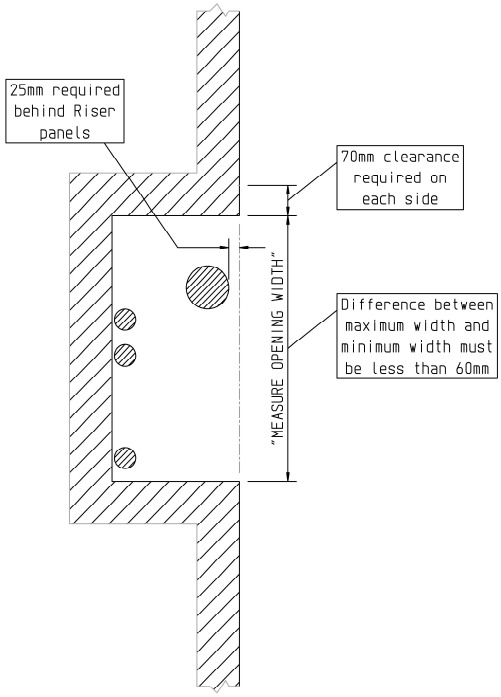

Note: The widest riser opening that can be accommodated is 625mm.

If you have any queries, please call 01254 819100 to discuss or email sales@ritherdon.co.uk

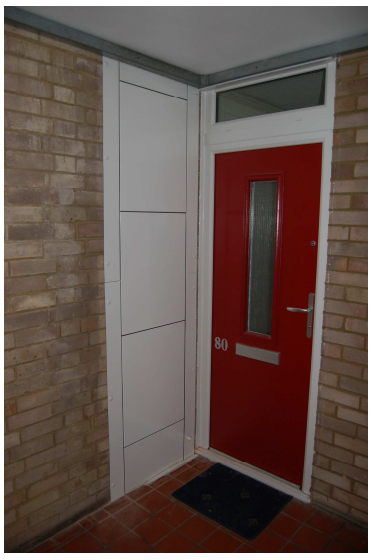

RISER FIRESEAL
MEASURING INSTRUCTIONS

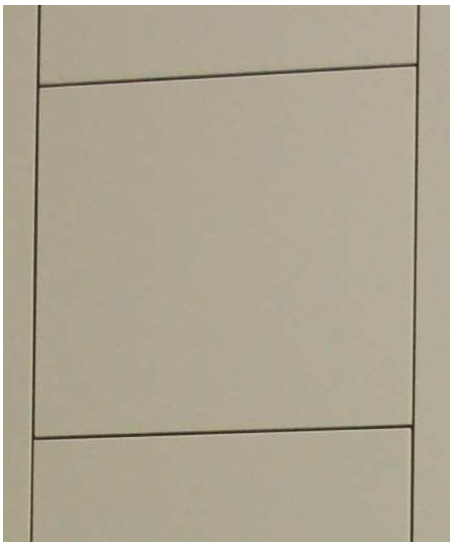

Blank Panel

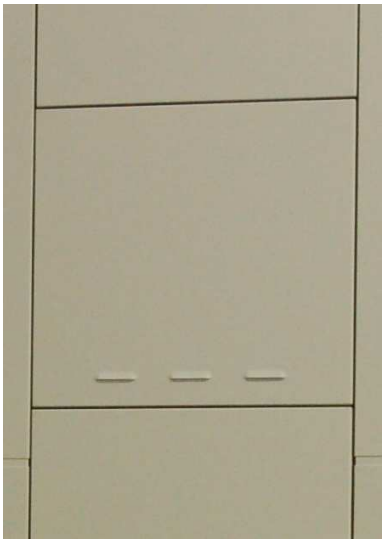

Ventilated Panel

Choices of panels that can be ordered with the Riser FireSeal system

- **Blank**
- **Ventilated**
- **Access Panel**

Please provide details of which panels you require when submitting the dimensions to our Sales Team 01254 819100 or sales@ritherdon.co.uk

Access Panel with hinged door